

Artikelnummer: 50.CBS.0



Cutlery container



Product specifications

External dimensions (L x W x H) 108 x 108 x 140 mm

Temperature range -30°C to +80°C

Color Grey

Material PP

Bottom Fine mesh

Sidewalls Fine mesh

European Article Number 7424927558582

Properties

The cutlery drainer is suitable for washing cutlery upright

Optimally usable in plate baskets with pegs, and also for the cutlery drainer set 50.CBS.4 or the cutlery basket 50.NK.120.44.16

Description

Plastic cutlery holder (108 x 108 x H 140 mm) with fine perforations to prevent cutlery from protruding through the openings. Our plastic cutlery holders are designed for washing cutlery while standing. The cutlery holder is ideally used in plate baskets with pins. The holder is clamped between the pins, preventing it from tipping over. Our cutlery baskets and cutlery holders are finely meshed, preventing the cutlery from falling through, and the open construction ensures a perfect rinsing result.



Matching accessories



50.UK.100



50.P.18.14



50.NK.100

Alternatieve artikelen



50.BK.100



50.BKS.20.5